


## EASY TO USE




Slide the buckle onto the band in the direction of the arrow and push around to the housing.

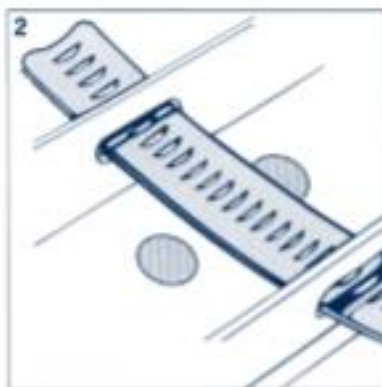


Thread the band through the slots in the sign and around post.



Engage the band into the screw housing and screw band through by approximately 50mm.

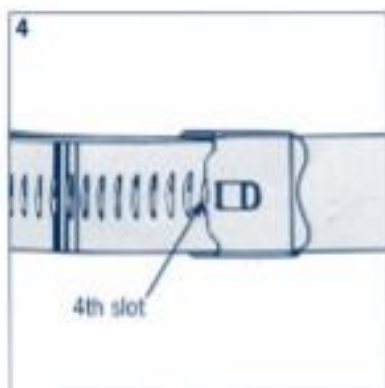

Locate the tongue of the buckle in the 4th slot of the band. Screw the band through using a hand or power tool.

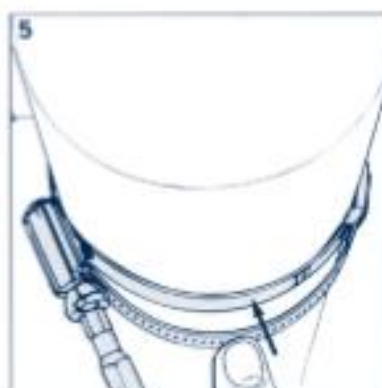

Hold down any excess band just before the buckle is clamped. Finally tighten with the ratchet spanner.



Push any remaining excess band through the buckle for a safe, tidy job. Tamtorque can be released and repositioned if required.